INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
FRONT ASHTRAY P/N 08U25-S84-100F	**1999 ACCORD 2- AND 4-DOOR**	**All 20006**
		Issue Date **SEP 1998**

PARTS LIST

Ashtray base

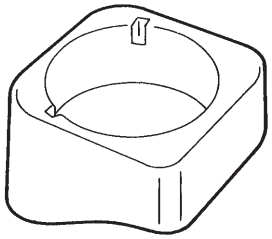

Ashtray

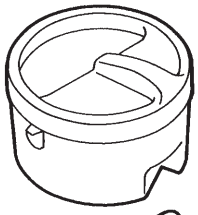

Bracket

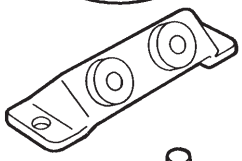

Stay

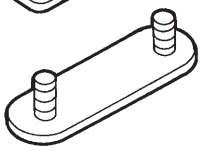

2 Flange nuts

Template

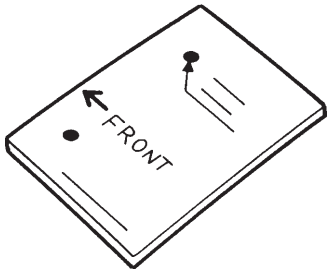

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
Ratchet
9 mm Socket
Shop towel
Felt-tip pen
Drill
Eye protection (face shield, safety goggles, etc.)
6 mm Drill bit
File

INSTALLATION

Customer Information: The information in this Accessory Installation Instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

1. On A/T model, pry up on the four retaining tabs, and remove the trim ring. On M/T model, remove the shift knob by turning it counterclockwise.

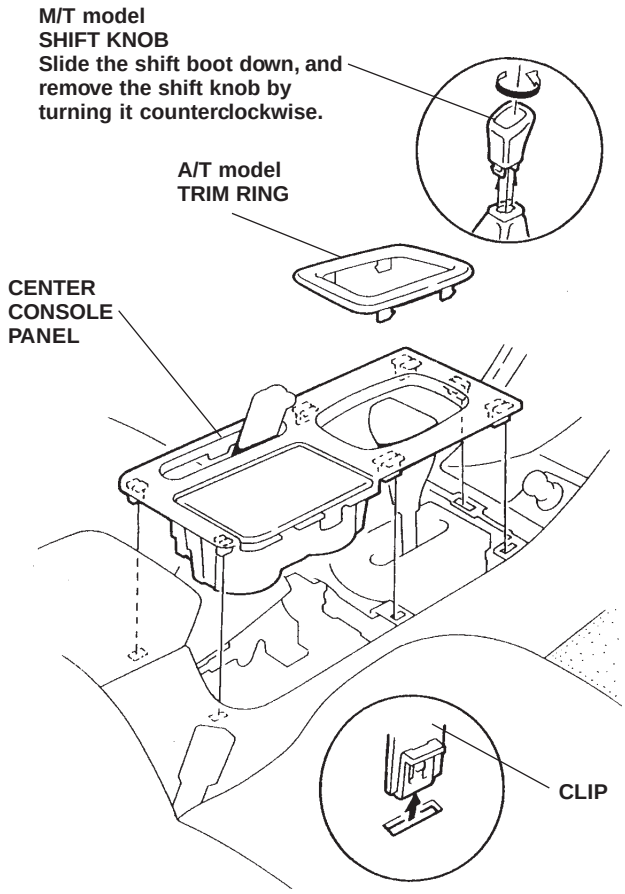

2. Remove the center console panel (seven retaining clips).

1998 American Honda Motor Co., Inc - All Rights Reserved.

3. Remove the front console lower cover (four clips and pull).

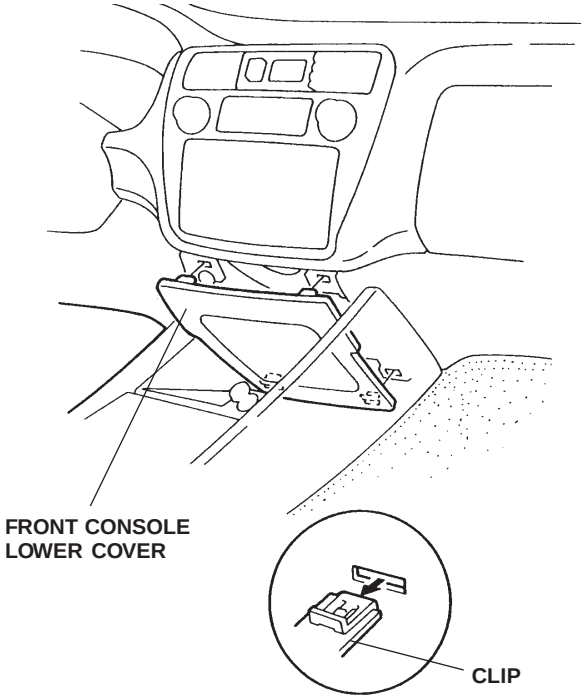

4. Remove the front tray (two self-tapping screws, release the three retaining tabs, and unplug the connector).

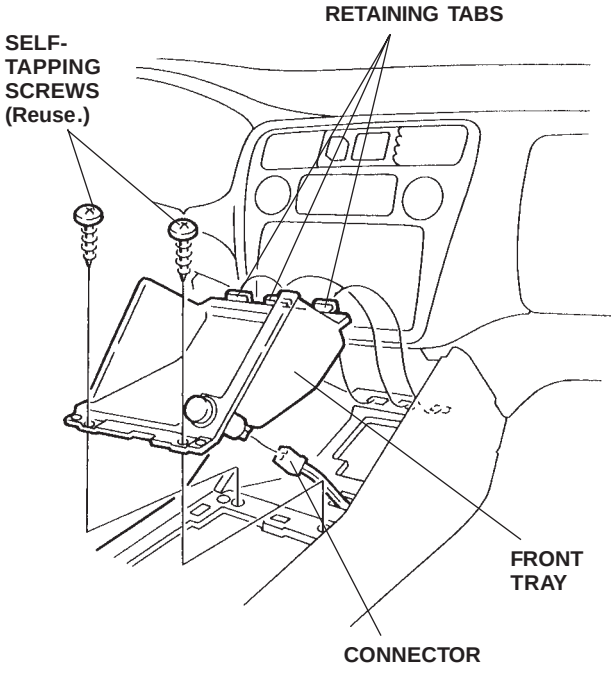

5. Position the template on the outside of the front tray in the direction shown, and mark the tray at each hole with a felt-tip pen.

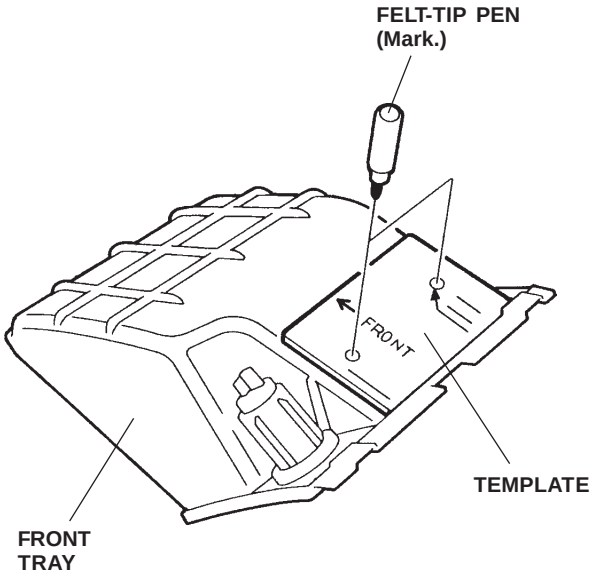

6. While wearing eye protection, drill a 6 mm hole through each mark you made.

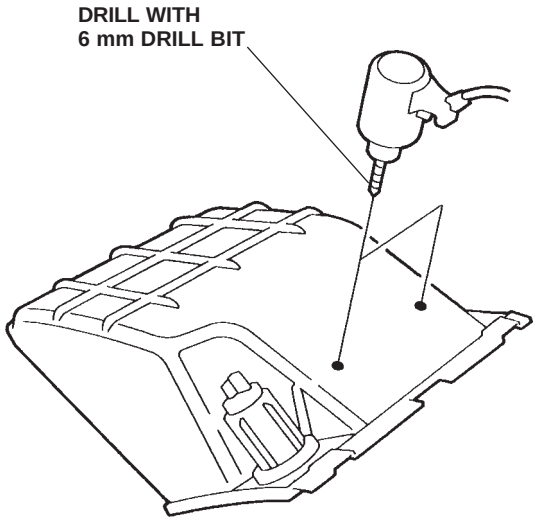

7. Remove any burrs from the 6 mm holes.

All 20006 (9809)
1998 American Honda Motor Co., Inc - All Rights Reserved.

8. Position the bracket over the 6 mm holes you drilled, and secure it with the stay and the two flange nuts. Tighten the nuts securely.

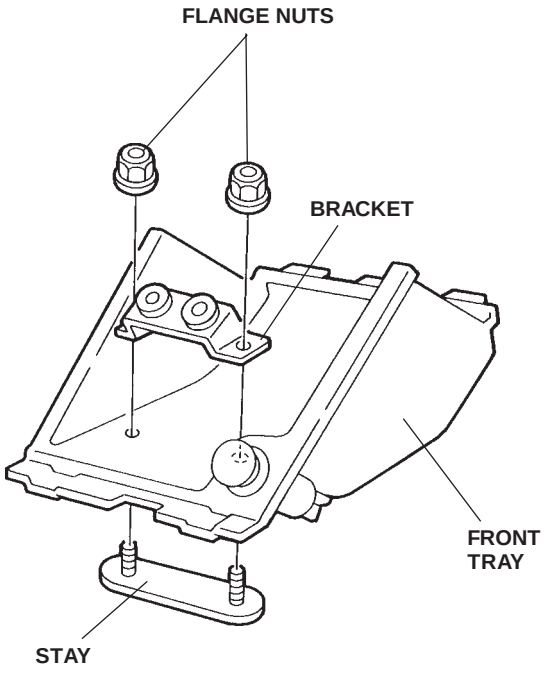

9. Reinstall the front tray.

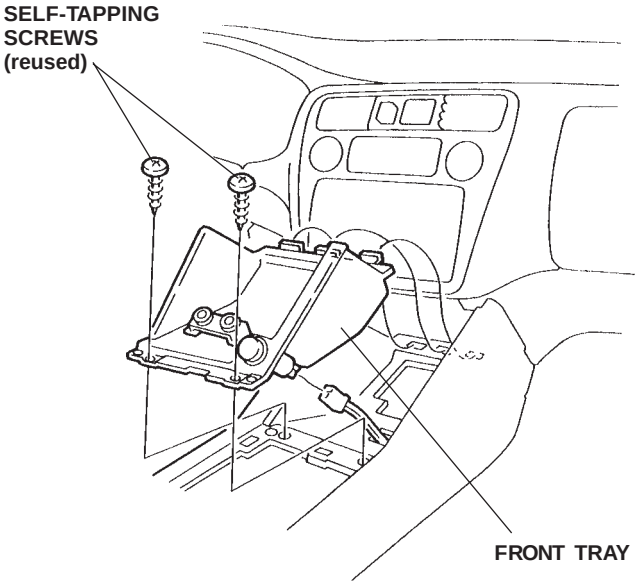

10. Align the two retaining tabs of the ashtray with the ashtray base, and install the ashtray; then install the ashtray on the bracket by inserting its two retaining pins into the grommets.

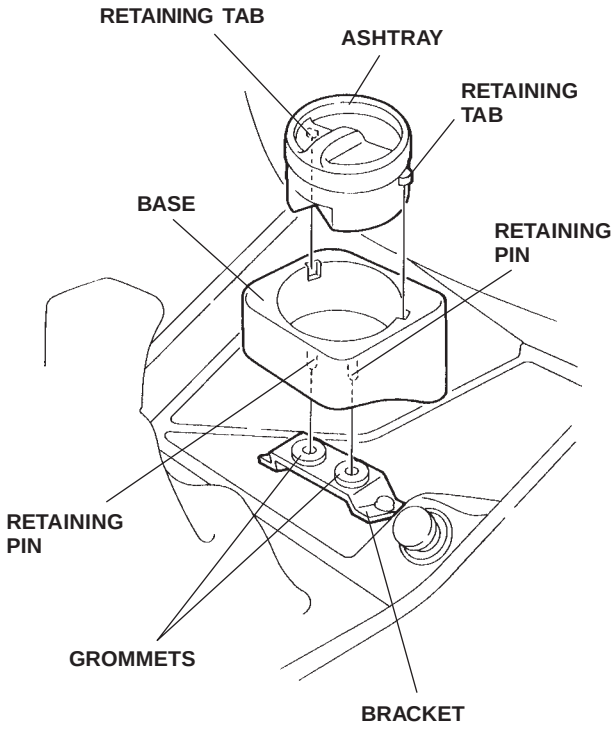

11. Reinstall all removed parts.

1998 American Honda Motor Co., Inc - All Rights Reserved.